

## CSA

Customer Specified Avionics



## Product Overview

The CSA product line is made up of more than 100 individual part number assemblies including electronic controls, audio and annunciator panels, current sensors, and converters. The installed base includes a wide range of business jets and the products remain in active production.

## \*Part Numbers

\*Please see next page for complete P/N information

## Contact Information

### Program Manager

Name: Carl Hawkins

Phone: (321) 254-1500 , ext. 7265

Email: [CHawkins@extantaerospace.com](mailto:CHawkins@extantaerospace.com)

### Customer Service

Toll Free 24-hr Support: (888) 327-7994

Email: [Customerservice@extantaerospace.com](mailto:Customerservice@extantaerospace.com)

## Complete Repair, Unit Exchange & Spares Service

P/N	DESCRIPTION	P/N Continued	DESCRIPTION Cont
1165-1	ECS CONTROLLER	307-1	CURRENT SENSOR
1165-1-1	ECS CONTROLLER	308-1	CURRENT SENSOR
1165-1-5	ECS VALVE CONTROLLER	309-1	AURAL WARNING TONE GENERATOR
1165-1-6	FINAL-ASSY, ECS CONTROLLER	309-1-2	AURAL WARNING TONE GENERATOR
1180-1-1	FINAL ASSEMBLY: CURRENT SENSOR	309-1-3	AURAL WARNING TONE GENERATOR
1180-1-2	FINAL ASSEMBLY: CURRENT SENSOR	310-1-1	INDICATOR, LOADMETER & VOLTMETER
1188-1-1	DUAL TRIM-IN-MOTION DETECTOR	310-1-2	MULTI FUNCTION INDICATOR
1241-1-1	SWITCH CONTROLLER	310-2	INDICATOR, LOADMETER & VOLTMETER
1241-1-3	LAV CONTROLLER, P.B. 4348-12 R	327-1	IND PANEL STANDBY ELECTRICAL POWER
1241-1-4	LAV CONTROLLER, P.B. 4348-14 R	327-1-1	IND PANEL STANDBY ELECTRICAL POWER
1246-1-169	FINAL ASSY. LAMP ASSY.	327-1-2	IND PANEL STANDBY ELECTRICAL POWER
1287-1	AURAL WARNING TONE GENERATOR	327-1-3	IND PANEL STANDBY ELECTRICAL POWER
1287-1-1	FINAL ASSY, WARNING UNIT	327-1-5	IND PANEL STANDBY ELECTRICAL POWER
1287-1-2	FINAL ASSY, WARNING UNIT	327-1-6	IND PANEL STANDBY ELECTRICAL POWER
1288-1-1	FINAL ASSY, JUMP SEAT AUDIO	353-1-1	BALLAST CONTROLLER
1288-1-2	FINAL ASSEMBLY: JUMP SEAT AUDIO	353-1-2	BALLAST CONTROL
1288-1-3	FINAL ASSEMBLY: JUMP SEAT AUDIO	354-1	FINAL ASSEMBLY, BALLAST - FLUORESCENT
1304-1-1	ANNUNCIATOR	464-1	CHIME
1304-1-11	FINAL ASSY, ANNUNCIATOR	465-1	ANNUNCIATOR PANEL
1304-1-12	FINAL ASSY, ANNUNCIATOR	465-1-11	ANNUNCIATOR PANEL
1304-1-13	FINAL ASSY, ANNUNCIATOR	465-1-13	ANNUNCIATOR PANEL
1304-1-16	FINAL ASSEMBLY: ANNUNCIATOR	465-1-17	ANNUNCIATOR PANEL
1304-1-17	FINAL ASSEMBLY: ANNUNCIATOR	465-1-18	ANNUNCIATOR PANEL
1304-1-18	FINAL ASSEMBLY: ANNUNCIATOR	466-1	MASTER WARNING ANNUNCIATOR
1304-1-19	FINAL ASSEMBLY: ANNUNCIATOR	466-1-12	MASTER WARNING ANNUNCIATOR
1304-1-2	ANNUNCIATOR	466-1-13	MASTER WARNING ANNUNCIATOR
1304-1-3	ANNUNCIATOR	466-1-14	MASTER WARNING ANNUNCIATOR
1304-1-4	ANNUNCIATOR	497-1	WINDSHIELD TEMPERATURE CONTROL
1304-1-5	ANNUNCIATOR	497-1-2	WINDSHIELD TEMPERATURE CONTROL
1304-1-6	ANNUNCIATOR	497-1-3	WINDSHIELD TEMPERATURE CONTROL
1304-1-7	FINAL ASSY, ANNUNCIATOR	582-1-1	ANNUNCIATOR
1304-1-8	ANNUNCIATOR	582-1-2	ANNUNCIATOR
1304-1-9	ANNUNCIATOR	582-1-4	ANNUNCIATOR
1310-1-1	LOAD SHED CONTROLLER	582-1-5	ANNUNCIATOR
1461-1-1	WINDSHIELD TEMPERATURE CONTROLLER	582-1-6	ANNUNCIATOR
1461-1-2	WINDSHIELD TEMPERATURE CONTROLLER	591-1	TIME DELAY RELAY
1609-1-1	DIM BOX ASSY, STBY FUEL PUMP	603-1-1	LIGHT DIMMER
1625-1-1	TRIM-IN-MOTION DETECTOR	621-1-1	WINDOW SHADE & READING LIGHT CONTROL

P/N	DESCRIPTION	P/N Continued	DESCRIPTION Cont
1625-1-2	TRIM-IN-MOTION DETECTOR	622-1-1	MASTER COMMAND MODULE
1730-1-1	FINAL ASSEMBLY ANNUNCIATOR	622-1-2	MASTER COMMAND MODULE
1730-1-2	PARTS LIST: ANNUNCIATOR	807-1-1	ANTI-ICE CONTROLLER
1730-1-3	PARTS LIST: ANNUNCIATOR	807-1-2	ANTI-ICE CONTROLLER
180-1	CURRENT SENSOR	807-1-3	FINAL ASSEMBLY, ANTI-ICE CONTROLLER
207-1	CURRENT SENSOR	828-1-1	ANNUNCIATOR
218-1	TRIM-IN-MOTION DETECTOR	828-1-10	ANNUNCIATOR
221-1	HORIZONTAL TRIM ADVISORY UNIT	828-1-11	ANNUNCIATOR
224-1	CURRENT SENSOR	828-1-12	ANNUNCIATOR PANEL
225-1	TRIM-IN-MOTION DETECTOR	828-1-13	ANNUNCIATOR PANEL
226-1	TRIM-IN-MOTION TESTER	828-1-14	FINAL ASSEMBLY: ANNUNCIATOR
228-1	TRIM IN MOTION DETECTOR	828-1-15	FINAL ASSEMBLY: ANNUNCIATOR
229-1	TEMPERATURE SENSING SIMULATOR	828-1-16	FINAL ASSEMBLY: ANNUNCIATOR
230-1	FINAL ASSEMBLY, POWER SUPPLY - DIMM	828-1-17	FINAL ASSEMBLY: ANNUNCIATOR
231-1	TRIM IN MOTION DETECTOR	828-1-18	FINAL ASSEMBLY: ANNUNCIATOR
231-1-2	FINAL ASSY, TRIM-IN-MOTION DETE	828-1-19	FINAL ASSEMBLY: ANNUNCIATOR
233-1-1	CURRENT SENSOR	828-1-20	FINAL ASSEMBLY: ANNUNCIATOR
233-1-2	CURRENT SENSOR	828-1-21	FINAL ASSEMBLY: ANNUNCIATOR
253-1	CURRENT SENSOR	828-1-8	ANNUNCIATOR
254-1	CURRENT SENSOR	848-1-1	MASTER WARNING ANNUNCIATOR PANEL
256-1	CURRENT SENSOR	856-1-1	WINDSHIELD TEMPERATURE CONTROL
256-1-3	CURRENT SENSOR	856-1-2	WINDSHIELD TEMPERATURE CONTROL
268-1	FINAL ASSEMBLY, CURRENT SENSOR	856-1-3	WINDSHIELD TEMP CONTROL
268-1-2	FINAL ASSEMBLY, CURRENT SENSOR	866-1-1	FINAL ASSEMBLY: DUAL POWER SUPPLY
268-1-3	FINAL ASSEMBLY, CURRENT SENSOR	902-1-1	MACH TRIM ADAPTER
268-1-4	FINAL ASSEMBLY, CURRENT SENSOR	902-1-2	MACH TRIM INTERFACE
268-1-5	FINAL ASSEMBLY, CURRENT SENSOR	914-1-1	ANNUNCIATOR
269-1	PROGRAMMABLE TIMER	914-1-2	FINAL ASSY, ANNUNCIATOR
270-1	FINAL ASSEMBLY: ELECTRONIC CHIME	914-1-3	ANNUNCIATOR
271-1	POWER SUPPLY DIMMER CONTROL	937-1-1	DE-ICE TIMER
273-1	D.C. LAMP DIMMER	938-1-1	FINAL ASSEMBLY: ANNUNCIATOR
281-1	PROGRAMMABLE TIMER	938-1-2	ANNUNCIATOR
297-1	DUAL SIGNAL CONDITIONER	961-1-1	FINAL ASSY: WINDSHIELD TEMP CONTROL
302-1	WINDSHIELD TEMPERATURE CONTROLLER	970-1-1	CURRENT TRANSFORMER
		999-1-1	NOISE FILTER