

Product Family	Part Number	Description
Indicators	100524	INDICATOR, HORIZONTAL SITUATION
Indicators	107500	INDICATOR, ATTITUDE DIRECTOR
Indicators	109090	INDICATOR, ATTITUDE DIRECTOR
Indicators	112750	INDICATOR, ATTITUDE DIRECTOR
Indicators	112790	INDICATOR, ATTITUDE DIRECTOR
Indicators	113044	INDICATOR, ATTITUDE DIRECTOR
Indicators	113150	INDICATOR, ATTITUDE DIRECTOR
Indicators	113515	INDICATOR, HORIZONTAL SITUATION
Indicators	113540	INDICATOR, ATTITUDE DIRECTOR
Indicators	114700	INDICATOR, ATTITUDE DIRECTOR
Indicators	117800	INDICATOR, ATTITUDE DIRECTOR
Indicators	118320	INDICATOR, TURN AND SLIP
Indicators	119500	INDICATOR, ATTITUDE DIRECTOR
Indicators	121650	INDICATOR, ATTITUDE DIRECTOR
Indicators	122400	INDICATOR, HORIZONTAL SITUATION
Indicators	125070	INDICATOR, ATTITUDE DIRECTOR
Indicators	125200	INDICATOR, ATTITUDE DIRECTOR
Indicators	125780	INDICATOR, ATTITUDE DIRECTOR
Indicators	125900	INDICATOR, BEARING, DIST AND HEADING
Indicators	126090	INDICATOR, ATTITUDE DIRECTOR
Indicators	126460	INDICATOR, HORIZONTAL SITUATION
Indicators	126610	INDICATOR, HORIZONTAL SITUATION
Indicators	126650	INDICATOR, HORIZONTAL SITUATION
Indicators	127500	INDICATOR, ATTITUDE DIRECTOR
Indicators	128710	INDICATOR, ATTITUDE DIRECTOR - SIMULATOR
Indicators	128800	INDICATOR, HORIZONTAL SITUATION
Indicators	129060	INDICATOR, ATTITUDE DIRECTOR
Indicators	129160	INDICATOR, ATTITUDE DIRECTOR
Indicators	129222	INDICATOR, HORIZONTAL SITUATION
Indicators	130500	INDICATOR, HORIZONTAL SITUATION
Indicators	130530	INDICATOR, ATTITUDE DIRECTOR
Indicators	132490	INDICATOR, HORIZONTAL SITUATION
Indicators	132750	INDICATOR, HORIZONTAL SITUATION
Indicators	133640	INDICATOR, HORIZONTAL SITUATION

Product Family	Part Number	Description
Indicators	135070	INDICATOR, ATTITUDE DIRECTOR
Indicators	137200	INDICATOR, BEARING, DIST AND HEADING
Indicators	102379-1	INDICATOR, ATTITUDE DIRECTOR
Indicators	111302-5	INDICATOR, HORIZONTAL SITUATION
Indicators	111303-4	INDICATOR, ATTITUDE DIRECTOR
Indicators	112790-1	INDICATOR, ATTITUDE DIRECTOR
Indicators	113540-3	INDICATOR, ATTITUDE DIRECTOR
Indicators	113540-MOD-B	INDICATOR, ATTITUDE DIRECTOR
Indicators	118600-5	INDICATOR, HORIZONTAL SITUATION
Indicators	123790-5	INDICATOR, HORIZONTAL SITUATION
Indicators	125810-3	INDICATOR, HORIZONTAL SITUATION
Indicators	126300-17	INDICATOR, ATTITUDE DIRECTOR
Indicators	126300-18	INDICATOR, ATTITUDE DIRECTOR
Indicators	126370-11	INDICATOR, BEARING, DIST AND HEADING
Indicators	126460-7	INDICATOR, HORIZONTAL SITUATION
Indicators	127450-5	INDICATOR, HORIZONTAL SITUATION
Indicators	127450-7	INDICATOR, HORIZONTAL SITUATION
Indicators	127450-9	INDICATOR, HORIZONTAL SITUATION
Indicators	127500-5	INDICATOR, ATTITUDE DIRECTOR
Indicators	129060-13	INDICATOR, ATTITUDE DIRECTOR
Indicators	129060-15	INDICATOR, ATTITUDE DIRECTOR
Indicators	129060-17	INDICATOR, ATTITUDE DIRECTOR
Indicators	129060-21	INDICATOR, ATTITUDE DIRECTOR
Indicators	129060-5	INDICATOR, ATTITUDE DIRECTOR
Indicators	129400-13	INDICATOR, HORIZONTAL SITUATION
Indicators	129400-3	INDICATOR, HORIZONTAL SITUATION
Indicators	129400-9	INDICATOR, HORIZONTAL SITUATION
Indicators	129920-3	INDICATOR, ATTITUDE DIRECTOR
Indicators	130500-5	INDICATOR, HORIZONTAL SITUATION
Indicators	131440-3	INDICATOR, HORIZONTAL SITUATION
Indicators	132370-5	INDICATOR, HORIZONTAL SITUATION
Indicators	132490-3	INDICATOR, HORIZONTAL SITUATION
Indicators	132500-2	INDICATOR, ATTITUDE DIRECTOR
Indicators	132570-3	INDICATOR, HORIZONTAL SITUATION

Product Family	Part Number	Description
Indicators	132750-11	INDICATOR, HORIZONTAL SITUATION
Indicators	132750-3	INDICATOR, HORIZONTAL SITUATION
Indicators	132750-5	INDICATOR, HORIZONTAL SITUATION
Indicators	132750-9	INDICATOR, HORIZONTAL SITUATION
Indicators	133640-11	INDICATOR, HORIZONTAL SITUATION
Indicators	134080-5	INDICATOR, ATTITUDE DIRECTOR
Indicators	134080-7	INDICATOR, ATTITUDE DIRECTOR
Indicators	135070-5	INDICATOR, ATTITUDE DIRECTOR
Indicators	135160-5	INDICATOR, ATTITUDE DIRECTOR
Indicators	135220-3	INDICATOR, HORIZONTAL SITUATION
Indicators	136670-3	INDICATOR, ATTITUDE DIRECTOR
Indicators	136700-3	INDICATOR, ATTITUDE DIRECTOR
Indicators	136710-5	INDICATOR, HORIZONTAL SITUATION
Indicators	137200-3	INDICATOR, BEARING, DIST AND HEADING
Indicators	137330-1	INDICATOR, ATTITUDE DIRECTOR
Indicators	137370-11	INDICATOR, ATTITUDE DIRECTOR
Indicators	137980-1	INDICATOR, HORIZONTAL SITUATION
Indicators	137990-1	INDICATOR, ATTITUDE DIRECTOR
Indicators	138230-1	INDICATOR, HORIZONTAL SITUATION
Indicators	138410-1	INDICATOR, ATTITUDE DIRECTOR
Indicators	138740-15	INDICATOR, HORIZONTAL SITUATION
Indicators	138740-17	INDICATOR, HORIZONTAL SITUATION
Indicators	138740-23	INDICATOR, HORIZONTAL SITUATION
Indicators	138740-25	INDICATOR, HORIZONTAL SITUATION
Indicators	138740-5	INDICATOR, HORIZONTAL SITUATION
Indicators	138740-9	INDICATOR, HORIZONTAL SITUATION
Indicators	139950-1	INDICATOR, HORIZONTAL SITUATION
Indicators	147140-9	INDICATOR, BEARING, DIST AND HEADING
Indicators	147140-9MOD-A	INDICATOR, BEARING, DIST AND HEADING
Indicators	165840-1	INDICATOR, HORIZONTAL SITUATION
Indicators	165840-9	INDICATOR, HORIZONTAL SITUATION
Indicators	174356-07	BATTERY, LITHIUM, 3.9 V
Indicators	218-0027-901	VANASY VANE ASSEMBLY PITCH
Indicators	218-0027-902	VANASY VANE ASSEMBLY ROLL

Product Family	Part Number	Description
Indicators	236-0041-905	RTRASY ROTOR ASSY DG 26VAC
Indicators	236-0041-906	ROTOR ASSEMBLY HRI 26VAC
Indicators	236-0051-901	RTRASY ROTOR ASSEMBLY
Indicators	236-0055-901	RTRSY, ROTOR ASSEMBLY, HRI 13V
Indicators	236-0055-902	RTRSY ROTOR ASSY HRI 26V
Indicators	239-0086-904	PIVASY PIVOT ASSEMBLY DG
Indicators	239-0086-905	PIVASY PIVOT ASSEMBLY DG
Indicators	248-0168-901	INDASY INDICATOR ASSY
Indicators	252-0071-916	AAY RHGASY ROTOR HOUSING ASSY
Indicators	252-0092-901	RHGASY ROTOR
Indicators	256-0011-902	AAY LVRASY LEVER ASSY
Indicators	504-0035-901	520-1A
Indicators	504-0035-903	520-1B
Indicators	504-0035-905	520-2A
Indicators	504-0035-907	520-2B
Indicators	504-0035-909	520-3A
Indicators	504-0035-912	AIM 520 GYRO
Indicators	504-0035-921	520-9B
Indicators	504-0035-922	520-10B
Indicators	504-0035-923	ATTITUDE INDICATOR GRH 504-0035-923
Indicators	504-0035-926	TOP LVL, 520-16B, 10 DEG, ROT, 28 B/W, BLACK
Indicators	504-0035-XXX	AIM 520-() 2-Inch Indicator, 28VDC Power
Indicators	504-0110-902	TOPLVL, 1100-14(11), 11 DEG TILT, UNIT
Indicators	504-0110-905	1100-14S(11)
Indicators	504-0110-906	1100-14(5)DIA
Indicators	504-0110-926	TOPLVL, 110014LK(0D), 0 DEG TILT, LIT 14V B/W, W/KNOB CVR
Indicators	504-0110-927	TOPLVL, 1100-14LK(-2D), NEG 2 DEG TILT, LIT 14V B/W, W/KNOB CVR
Indicators	504-0111-902	1100-28(11)
Indicators	504-0111-905	AIM-1100, 3" Attitude Indicator, 28VDC, Blue/White Lighting
Indicators	504-0111-906	1100-28(0) CES Attitude Indicator
Indicators	504-0111-907	1100-28LS(8F)
Indicators	504-0111-908	1100-28(5)
Indicators	504-0111-912	1100-28L(5F), 5 DEG TILT, LIT 28V BW
Indicators	504-0111-915	1100-28L(12F)

Product Family	Part Number	Description
Indicators	504-0111-916	1100-28L(14F)
Indicators	504-0111-917	1100-28LS(0F)
Indicators	504-0111-919	1100-28LS(12F)
Indicators	504-0111-920	1100-28LS(14F)
Indicators	504-0111-927	1100-28S (11)
Indicators	504-0111-929	1100-28L(15F)
Indicators	504-0111-930	TOPLVL BOM, 1100-28LS(15F), 15 DEG TILT, LIT 28V B/W
Indicators	504-0111-931	1100-28L(11F)
Indicators	504-0111-932	1100-28LS(11F)
Indicators	504-0111-934	1100-28L(10F) Attitude Indicator
Indicators	504-0111-935	1100-28LS(16F)
Indicators	504-0111-936	1100-28L(0F)DIA
Indicators	504-0111-937	A/H INDICATOR
Indicators	504-0111-938	1100-28LK(0F)DIA; 28v B/W
Indicators	504-0111-942	1100-28LS(14E)
Indicators	504-0111-944	1100-28K(10), 10 DEG TILT, W/KNOB COVER
Indicators	504-0121-901	TOPLVL BOM, 1200-1R(0D), 0 DEG, 28V B/W, ROTATING DIAL, REAR MNT
Indicators	504-0121-902	TOPLVL BOM 1200-1R(0B), 0 DEG TILT
Indicators	504-0121-905	1200-1R(8D)
Indicators	504-0121-906	1200-1R(10D)
Indicators	504-0121-910	1200-1R(14D)
Indicators	504-0121-911	1200-1R(15D)
Indicators	504-0121-916	1200-1RS(8D)
Indicators	504-0121-918	TOPLVL BOM, 1200-1RS(12D), 12 DEG TILT, 28V B/W, ROTATING DIAL, REAR MNT., W/SLIP IND.
Indicators	504-0121-919	1200-1RS(14D)
Indicators	504-0121-920	TOPLVL BOM, 1200-1FK(20B), 20 DEG TILT, 5V B/W, FIXED DIAL, REAR MNT., NON-TRIM AP.
Indicators	504-0121-922	1200-1R(15D)M
Indicators	504-0121-924	510 AIM Series
Indicators	504-0121-926	1200-1R(15D)M
Indicators	504-0121-929	1200-1R(20D)
Indicators	504-0121-930	1200-1FK(20N)
Indicators	504-0121-931	1200-1RS(15D)

Product Family	Part Number	Description
Indicators	504-0122-902	1200-2RS(15D)
Indicators	504-0122-906	1200-2FS(15D)
Indicators	504-0122-907	AIM 1200
Indicators	504-0122-916	1200-2F(10C) Attitude Indicator
Indicators	504-0122-918	1200-2RS(22B)
Indicators	504-0125-901	INDICATOR - 1200-5R (15B)
Indicators	504-0128-902	TOPLVL BOM, 1200-8F(15N), HIRF, 15 DEG, 5V NVG, FIXED DIAL, FRONT MNT.
Indicators	505-0031-901	205-1A
Indicators	505-0031-903	205-1B
Indicators	505-0031-904	Directional Gyro - 205-1BL
Indicators	505-0031-929	205-1BF Dir. Gyro, 28VDC, Unlit, Front Mount
Indicators	505-0031-931	TOPLVL 205-1BLD, 28, 28V BW, NO SYN, REAR, W/SPECIAL MATING CONNECTOR
Indicators	505-0031-933	AIM 205-1BLR Directional Gyro
Indicators	510-()	TP-496 Attitude Indicator
Indicators	541-1175-01	AAY BEARING ASSY
Indicators	541-175-01	IND INDEX, INDICATOR
Indicators	550-5001-32	CAP CER X7R 1UF 100V 10PCT 2225 PB/PBF
Indicators	600-0004-001	LBL LABEL PUSH
Indicators	600-0015-001	LBL LABEL ERECT
Indicators	600-0055-001	LBL LABEL CAUTION
Indicators	600-0105-001	LABEL, OPTIONS
Indicators	600-0115-001	LBL LABEL CAGING KNOB
Indicators	600-0146-001	LBL PIN CONNECTION
Indicators	601-0635-001	LBL NAMEPLATE
Indicators	603-0003-001	SCREW SPECIAL
Indicators	603-0005-001	SCREW BALANCE
Indicators	603-0011-004	SCR VANE STOP
Indicators	603-0047-001	SCR BALANCE 10-32 UNF-2A FLAT, BRASS, L=.75
Indicators	603-0047-004	BALANCE SCREW 10-32 X 0.63
Indicators	603-0047-005	BALANCE SCREW 10-32 X 0.88
Indicators	603-0057-001	SCR SPROCKET SET
Indicators	603-0063-003	SCR SCREW, BEZEL ADAPTER

Product Family	Part Number	Description
Indicators	603-0066-001	SCR 8-32 BAL. SCREW X .75
Indicators	603-0066-002	SCR 8-32 BAL. SCREW X 1.00
Indicators	603-0066-003	SCR 8-32 BAL. SCREW X 1.25
Indicators	603-0066-004	SCR 8-32 BAL. SCREW X .63 SCR 8-32 BAL. SCREW X .63
Indicators	603-0066-005	SCR 8-32 BAL. SCREW X .88
Indicators	603-0068-901	PSY SCREW, BEARING PRELOAD ADJUSTMENT
Indicators	603-0069-001	SCR SCREW, BALANCE, SLOTTED HEADLESS
Indicators	603-1080-304	SCR SCREW
Indicators	603-1172-104	SCR SCREW
Indicators	603-1172-105	SCREW
Indicators	603-1172-112	SCR SCREW
Indicators	603-1172-304	SCR SCREW
Indicators	603-1256-104	SCR SCREW 2-56 X 1/8 BINDER HEAD ST ST
Indicators	603-1256-112	SCR SCREW 2-56 X 3/8 BINDER HEAD ST ST
Indicators	603-1256-408	SCR SCREW 2-56 X 1/4 SPLINE CUP POINT SET SCREW ST ST
Indicators	603-1256-512	SCR SCREW 2-56 X 3/8 SOCKET HEAD CAP ST ST
Indicators	603-1256-608	SCR SCREW 2-56 X 1/4 SET SCREW SOCKET, CUP POINT, SS
Indicators	603-1348-212	SCR SCREW
Indicators	603-1348-216	SCR SCREW
Indicators	603-1348-308	SCR SCREW 3-48 X 1/4
Indicators	603-1356-116	SCR SCREW
Indicators	603-1440-106	SCREW
Indicators	603-1440-110	SCR SCREW
Indicators	603-1440-308	SCR,4-40 x .25",FLAT HD PHIL,SST
Indicators	603-1440-406	SCR SCREW
Indicators	603-3256-104	SCR SCREW
Indicators	603-3356-104	SCR,3-56 x .125",BINDER HD SLOT,BRASS,BLK OXIDE
Indicators	603-7256-404	SCREW SET
Indicators	603-7440-403	SCR SCREW
Indicators	603-7440-404	SCR SCREW
Indicators	605-0015-001	NUT PRELOAD
Indicators	605-0017-002	NUT ROTOR SUPP ALUM
Indicators	605-0035-005	NUT HEX
Indicators	605-0050-001	NUT, SELF LOCKING

Product Family	Part Number	Description
Indicators	605-0051-004	NUT
Indicators	605-0059-001	NUT PRELOAD
Indicators	605-0061-001	NUT
Indicators	606-0008-001	WSHR WASHER NYLON
Indicators	606-0011-001	WSHR WASHER
Indicators	606-0015-001	WSHR BRASS
Indicators	606-0026-002	OPXWASHER SHIM S/S
Indicators	606-0026-003	OPXWASHER SHIM S/S
Indicators	606-0026-004	OPXWASHER , SHIM
Indicators	606-0032-007	WSHR NON-METALLIC WASHER, NYLON
Indicators	606-0032-016	NON-METALLIC WASHER, INSULATING
Indicators	606-0032-017	WASHER, NON-METALLIC, INSULATED
Indicators	606-0050-001	WSHR WASHER
Indicators	606-0061-001	WSHR WASHER
Indicators	606-0066-001	WSHR WASHER
Indicators	606-0073-001	WSHR WASHER, LOCK, SERRATED
Indicators	610-0012-001	SEAL, GASKET, STD
Indicators	610-0012-003	SEAL GASKET LARGE
Indicators	610-0012-004	SEAL, GASKET
Indicators	610-0074-006	SEAL O-RING
Indicators	610-0074-021	SEAL-O-RING
Indicators	610-0074-040	SEAL O RING
Indicators	610-0104-001	SEAL GASKET
Indicators	610-0107-001	SEAL CONNECTOR
Indicators	610-0107-002	SEAL GASKET
Indicators	610-0109-001	SEAL , DUST COVER
Indicators	610-0118-001	SEAL BEZEL GASKET
Indicators	611-0009-903	PSY RING RETAINER
Indicators	611-0014-002	RING LOCK
Indicators	611-0034-001	RING RETAINER
Indicators	611-0074-902	PSY RING ASSY
Indicators	611-0078-901	PSY RING ASSEMBLY
Indicators	611-0082-001	RING, CLASS RETAINING
Indicators	612-0004-001	GLASS

Product Family	Part Number	Description
Indicators	612-0045-901	GLASS SCREENED
Indicators	612-0064-902	GLASS
Indicators	612-0064-904	GLASS
Indicators	612-0100-902	PSY GLASS WEDGE LIGHTING
Indicators	612-0100-908	GLASS WEDGE LIGHTING
Indicators	612-0112-001	GLASS COVER
Indicators	612-0113-001	GLASS WEDGE, LIGHTING
Indicators	613-0195-901	BRACKET INCLINOMETER
Indicators	614-0168-902	COV DUST
Indicators	614-0173-902	PSY COV DUST
Indicators	616-0001-003	SPCR SPACER, BRUSH BLOCK
Indicators	616-0001-004	SPCR SPACER, BRUSH BLOCK
Indicators	616-0003-005	SPCR SPACER
Indicators	616-0003-007	SPCR SPACER
Indicators	616-0111-001	SPCR SPACER
Indicators	616-0137-001	SPCR SPACER
Indicators	616-0161-001	SPCR SPACER CAGING SHAFT
Indicators	616-0162-001	SPCR THREADED
Indicators	617-0003-001	COLLAR
Indicators	617-0015-002	COLLAR
Indicators	618-0005-001	VANE ERECTOR
Indicators	618-0026-901	AAY VANE ASSY ROLL
Indicators	618-0026-902	AAY VANE ASSY PITCH
Indicators	618-0033-901	PSY VANE ROLL, ERECTION
Indicators	620-0007-001	PIN BAR MOUNTING
Indicators	620-0007-002	PIN BAR MOUNTING
Indicators	620-0015-001	PIN PIVOT
Indicators	620-0094-001	PIN VANE
Indicators	621-0004-001	SLI CAGING
Indicators	622-0015-001	INSR,ASSY LIGHTING
Indicators	622-0015-002	INSR ASSY LIGHTING
Indicators	622-0015-004	INSR ASSY LIGHT
Indicators	622-0015-006	LIGHT BAR
Indicators	622-0015-013	INSERT ASSY, LIGHTING, 28V, NAVY RED

Product Family	Part Number	Description
Indicators	622-0015-014	INSR INSERT ASSY LIGHTING
Indicators	622-0032-904	INSR BEZEL W/4 DEG RELIEF
Indicators	622-0044-002	INSR LIGHTING ASSY 5V
Indicators	624-0018-001	BSHG BUSHING POINTER BAR
Indicators	625-0066-002	CLAMP
Indicators	626-0008-043	WEIGHT BALANCE
Indicators	629-0003-001	STOP CAGING
Indicators	631-0014-901	PSY GEAR SPUR
Indicators	631-0015-001	GEAR PINION
Indicators	631-0039-901	PSY GEAR CROWN
Indicators	631-0052-902	PSY GEAR SPUR
Indicators	632-0012-003	SFT SHAFT ECCENTRIC
Indicators	632-0025-002	SFT SHAFT AIRPLANE
Indicators	632-0123-001	SFT SHAFT
Indicators	632-0141-001	SFT SHAFT CAGING
Indicators	632-0144-003	SFT SHAFT CENTER
Indicators	632-0152-001	SFT PITCH CAGING
Indicators	632-0162-002	SHAFT, AIRPLANE
Indicators	632-0172-002	SFT SHAFT INNER
Indicators	632-0177-002	SFT SHAFT CAGING
Indicators	632-0198-001	SFT SHAFT, BEARING
Indicators	633-0002-901	PSY KNOB
Indicators	633-0006-901	PSY KNOB
Indicators	633-0011-901	PSY KNOB CAGING
Indicators	633-0042-901	PSY KNOB,CAGING
Indicators	635-0022-003	HSG HOUSING BEARING
Indicators	635-0022-004	HSG HOUSING BEARING
Indicators	635-0043-901	PSY HOUSING BEARING
Indicators	635-0045-901	PSY HOUSING BEARING
Indicators	635-0053-901	HSG HOUSING BEARING (ELECTRIC)
Indicators	635-0121-001	HSG HOUSING BEARING
Indicators	635-0141-001	HSG HOUSING, BEARING
Indicators	637-0004-001	Bearing, Annular, Ball
Indicators	637-0004-002	Bearing, Annular, Ball

Product Family	Part Number	Description
Indicators	637-0007-001	BRG BEARING
Indicators	637-0017-001	BRG BEARING POINTER BAR
Indicators	637-0021-001	BRG BEARING
Indicators	637-0039-001	BRG BEARING
Indicators	637-0070-001	BRG BEARING
Indicators	637-0070-002	BRG BEARING, FLANGED
Indicators	637-0071-002	BRG BEARING
Indicators	637-0074-001	BRG BEARING
Indicators	637-0075-001	BRG BEARING
Indicators	637-0078-001	BRG, BEARING
Indicators	637-0081-001	BRG BEARING, HIGH SPEED DWG
Indicators	637-0082-001	BRG BEARING, FLANGED
Indicators	637-0083-001	BEARING, BALL, RADIAL RETAINER, FLANGED
Indicators	639-0004-901	PSY PIVOT
Indicators	639-0056-901	PIV ASSEMBLY
Indicators	640-0021-901	PSE CAM PITCH
Indicators	640-0025-901	CAM ROLL LEVER MACH
Indicators	640-0026-003	CAM, PITCH CAGING
Indicators	640-0027-002	CAM
Indicators	642-0024-901	ACTUTR ACTUATOR MACHINED
Indicators	642-0024-903	ACTUTR ACTUATOR ASSY
Indicators	642-0024-906	PSY ACTUTR ACTUATOR PB
Indicators	642-0026-901	PSY ACTUTR ACTUTOR POINTER ASSY
Indicators	642-0027-901	ACTUTR ACTUATOR CAGING
Indicators	644-0014-901	AAY CARRIG BRG ASSY
Indicators	647-0005-002	WWTUBE TUBE WIRING
Indicators	647-1104-300	TUBING, CLEAR VINYL 4 AWG
Indicators	648-0039-001	IND INDICATOR
Indicators	648-0049-901	IND INDICATOR ASSY FLAG, RED/WHITE STRIPE
Indicators	648-0049-903	INDICATOR ASSY, FLAG, RED/BLACK STRIPE
Indicators	648-0055-903	IND INDICATOR INDEX
Indicators	648-0139-901	INDICATOR
Indicators	648-0145-901	IND INDICATOR INDEX FINI
Indicators	648-0145-903	IND INDEX, INDICATOR

Product Family	Part Number	Description
Indicators	648-0169-901	Pointer Bar
Indicators	648-0200-901	IND INDICATOR INDEX PNT
Indicators	648-0209-901	IND, INDICATOR INDEX
Indicators	648-0240-001	PSY, BAR PITCH INDICATOR
Indicators	648-0252-901	INDICATOR FINISHED
Indicators	649-0277-902	CASE PAINTED
Indicators	650-0086-901	DIAL
Indicators	651-0032-901	GMB GIMBAL,MACHINED DG
Indicators	652-0083-901	PSE RTRHSG ROTOR HOUSING HRI
Indicators	652-0087-903	RTRHSG ROTOR HOUSING
Indicators	653-0238-901	BEZ, BEZEL, MATCHED, DWG
Indicators	656-0010-901	ASY LVR ASSY ACTUATING
Indicators	656-0031-901	LVR ASSEMBLY
Indicators	656-0036-902	LVR LEVER ASSY, PITCH CAGING
Indicators	657-0006-001	No Bid Item Not Available
Indicators	657-0006-002	SPR TENSION
Indicators	657-0016-002	SPR SPRING COMPRESSION
Indicators	657-0066-001	SPR SPRING
Indicators	657-0075-001	SPR SPRING SHAFT
Indicators	657-0082-001	SPR SPRING, RETURN, DWG
Indicators	670-0016-001	TS-200
Indicators	670-0017-001	CMM - TS-200-3() (509-0001-())
Indicators	674-0002-001	BELT, O-RING, 1.45 ID, .047 THK, SILICONE RUBBER
Indicators	800-0067-001	PCB CIRCUIT BOARD
Indicators	800-0136-903	PCBASY CIRCUIT BOARD ASSY
Indicators	800-0140-901	PCBASY CIRCUIT BOARD ASSY
Indicators	800-0142-901	CIRCUIT BOARD, LIGHT ASSEMBLY
Indicators	800-0142-902	AAY PCBASY CIRCUIT BOARD ASSY
Indicators	800-0146-901	PCBASY CIRCUIT BOARD ASSY
Indicators	800-0157-901	PCBASY CIRCUIT BOARD ASSY
Indicators	800-0177-901	PCBASY INVERTER BOARD ASSY, 28V, BOM
Indicators	800-0178-901	PCB INVERTER ASSEMBLY, MODEL 1200, BOM
Indicators	801-0161-033	RES
Indicators	801-0161-036	RES

Product Family	Part Number	Description
Indicators	801-0200-089	RES CARB COMP/FILM 4.7K .125W 5PCT AXIAL
Indicators	801-0200-097	RES
Indicators	801-0216-468	RES, 5.11K RN50
Indicators	801-0216-470	RES, 5.23K, RN50
Indicators	801-0216-471	RES, 5.36K, RN50
Indicators	801-0216-472	RES, 5.49K RN50
Indicators	801-0216-475	RES, 5.62K RN50
Indicators	801-0216-477	RES, 5.90K RN50
Indicators	801-0216-480	RES, 6.04K RN50
Indicators	801-0216-481	RES, 6.19K RN50
Indicators	801-0216-483	RES, 6.34K RN50
Indicators	802-0204-406	CAP , THRU HOLE
Indicators	803-0010-001	INDCTR INDUCTOR
Indicators	804-0027-001	TRANSFORMER, TOROID
Indicators	806-0200-011	XSTR TRANSISTOR PB/PBF
Indicators	806-0200-015	INDUCTOR
Indicators	806-0201-008	XSTR TRANSISTOR PB/PBF
Indicators	806-0201-009	XSTR TRANSISTOR PB/PBF
Indicators	808-0014-013	IC INTEGRATED CIRCUIT
Indicators	808-0014-022	IC,INTEGRATED CIRCUIT
Indicators	808-0014-023	IC, QUAD, COMPARATOR, LOW POWER
Indicators	808-0022-001	IC,DRIVER FULL BRIDGE DMOS PBF
Indicators	809-0009-901	AAY SOLENOID ASSY
Indicators	811-0003-001	MOTR MOTOR INDICATOR
Indicators	811-0015-001	MOTR MOTOR INDICATOR
Indicators	814-0201-010	POT POTENTIOMETER
Indicators	815-0001-001	BRBLOK BRUSH BLOCK
Indicators	815-0002-001	BRBLOK BRUSH BLOCK
Indicators	815-0002-002	BRBLOK BRUSH BLOCK
Indicators	815-0025-001	BRBLOK BRUSH BLOCK INNER
Indicators	815-0027-001	BRUSH BLOCK
Indicators	816-0005-002	SWITCH
Indicators	817-0001-001	TERMINAL, 3/8", 2-56 THD, 1/8" THD LENGTH
Indicators	817-0007-001	TERM TERMINAL

Product Family	Part Number	Description
Indicators	817-0011-001	TERM TERMINAL KNURLED
Indicators	817-0011-002	TERM TERMINAL, KNURLED
Indicators	818-0003-002	PIFUSE FUSE SUBMINIATURE
Indicators	818-0003-003	PIFUSE,FUSE SUBMINIATURE
Indicators	818-0003-004	PIFUSE FUSE 3 AMP PICO
Indicators	820-0029-001	MTR GYRO
Indicators	820-0030-001	METER Y/D
Indicators	821-0047-001	CON CONNECTOR
Indicators	821-0122-901	PSY CON CONNECTOR
Indicators	821-0131-001	CON CONNECTOR MATING
Indicators	821-0144-001	CON CONNECTOR - 6 PIN
Indicators	823-2409-100	WIRE BLACK/WHITE 28AWG ELEC INSULA
Indicators	823-2600-100	OPWIRE, 26AWG, BLK, 19 STRAND
Indicators	823-2622-100	OPWIRE, 26AWG, RED, 19 STRAND
Indicators	823-2629-100	OPWIRE,RED/WHT
Indicators	823-2644-100	OPWIRE YEL
Indicators	823-2655-100	OPWIRE, GRN
Indicators	823-2699-100	WHITE 26 AWG
Indicators	826-0002-001	SLPRNG SLIP RING
Indicators	826-0004-001	SLPRNG SLIP RING
Indicators	826-0007-001	SLPRNG SLIP RING OUTER GIMB
Indicators	826-0027-001	SLPRNG SLIP RING
Indicators	826-0029-001	SLIP RING
Indicators	826-0030-001	SLIPRING
Indicators	827-0003-002	PSY,STATOR ASSY
Indicators	827-0010-001	STA STATOR
Indicators	827-0017-002	PSY STATOR
Indicators	827-0022-901	PSY STA ASSEMBLY 26V
Indicators	831-0006-001	RLY RELAY
Indicators	ILSC2MJ160103214142	1100-28L(0F)
Indicators	TP-529	Component Maintenance Manual, Attitude Indicator